

Circuit Options and Variations

Powershift Transmission

Note: Powershift transmission is fitted as a standard item on the all wheel steer machines, and is available as an option on the wheel steer machines.

Component List

- 1 Battery
- 2 Starter Switch
- 6 Neutral Start Relay
- 7 Transmission Dump Relay
- 9A Transmission Hand Dump Switch
- 11 Park Brake Relay
- 14 Park Brake Switch
- 29 Warning Buzzer
- 30 Park Brake Indicator Light
- 140 Drive Relay (Layshaft & Mainshaft)
- 141 Layshaft Solenoid
- 142 Mainshaft Solenoid
- 143 Forward High/Low Relay
- 144 Forward Low Solenoid
- 145 Forward High Solenoid
- 146 Neutral Relay
- 147 Reverse High/Low Relay
- 148 Reverse Low Solenoid
- 149 Reverse High Solenoid
- 150 Powershift Column Switch
- 151 'Ignition' Relay
- 152 Forward Relay
- 153 Reverse Relay

>> Indicates feed to the 2WD circuit, i.e. 2WD automatically selected when 4th gear is engaged. This facility is only applicable on machines up to serial number 409435.

